

GIGABYTE™

Quick Installation Guide
快速安裝說明
快速入门指南
V1.0



Welcome!

歡迎使用W566U/N筆記型電腦！


欢迎使用W566U/N笔记本电脑！

Congratulations on your purchase of the W566U/N Notebook computer. This Quick Start Guide offers information to guide you through a successful Notebook Setup.

感謝您選擇W566U/N筆記型電腦。為協助您順利使用W566U/N筆記型電腦，我們特地設計這份「快速安裝說明」來協助您開始設定您的W566U/N筆記型電腦。

感谢您选择W566U/N笔记本电脑。为协助您顺利使用W566U/N笔记本电脑，我们特地设计这份「快速入门指南」来协助您开始设定您的W566U/N笔记本电脑。


1 Know Your W566U/N Notebook Computer • 認識您的W566U/N筆記型電腦 • 认识您的W566U/N笔记本电脑

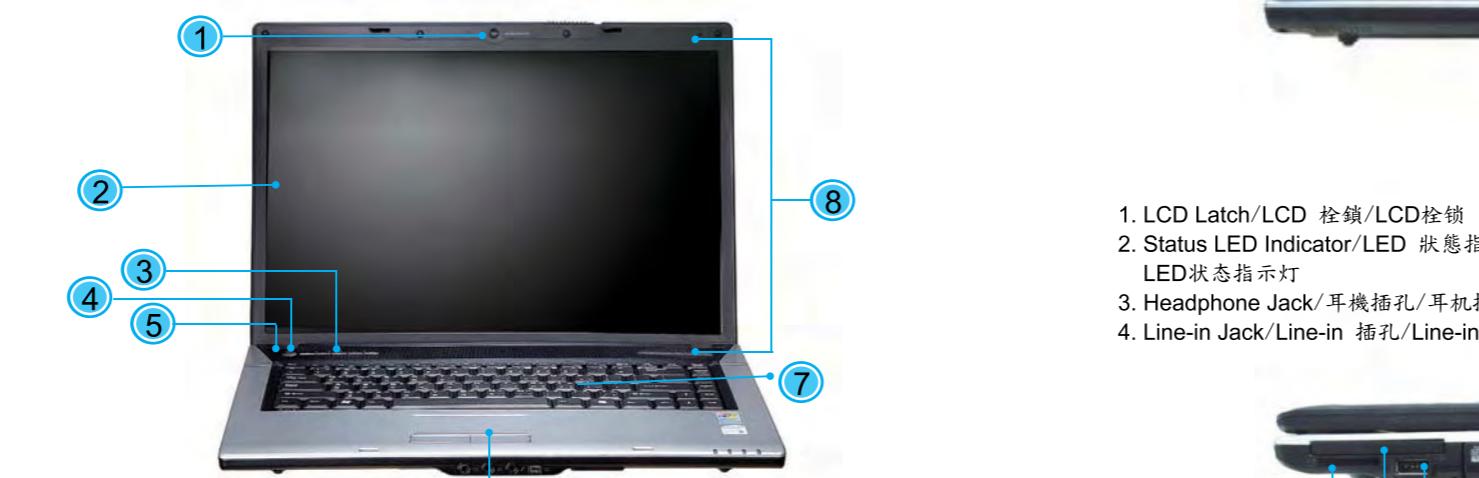

1. Web Cam/網路攝影機 网络摄影机
2. LCD Display Screen/LCD顯示螢幕/LCD 显示屏幕
3. Launch Keys/快速鍵/快速键
4. Light Sensor/光亮感測功能/光亮感测功能



1. Battery Bay/電池組槽/电池组槽
2. Battery Release Latch/電池釋放卡/电池释放卡锁

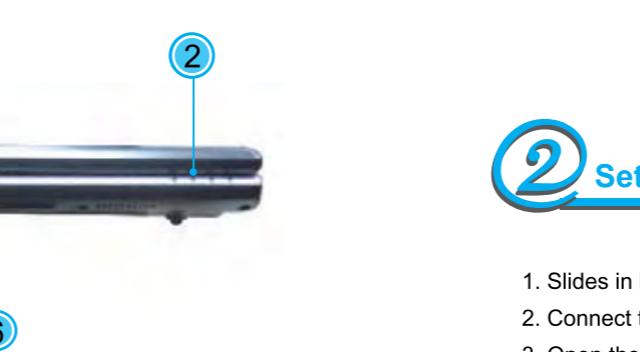

1. LCD Latch/LCD 框鎖/LCD栓锁
2. Status LED Indicator/LED 狀態指示燈/LED状态指示灯
3. Headphone Jack/耳機插孔/耳机插孔
4. Line-in Jack/Line-in 插孔/Line-in 插孔
5. Microphone Jack /麥克風插孔 /麦克风插孔
6. IEEE 1394 Port /IEEE 1394 連接埠/IEEE 1394 连接埠



1. 4-in-1 Card Reader/4合1多媒體讀卡插槽/4合1多媒体读卡器插槽
2. PCI Express Card or New Card Slot/PCI Express Card或New Card插槽
3. USB Port/USB埠/USB埠
4. Optical Disc Drive/光碟機/光驱
5. Optical Drive Indicator/光碟機狀態指示燈/光驱状态指示灯



1. Power Port/電源輸入插孔 /电源输入插孔
2. Port Replicator Connector/擴充底座連接埠 /扩充底座连接埠
3. LAN Port / LAN埠/ LAN埠
4. External Display Port /外部顯示器埠/外部显示器埠(W566U DVI;W566U D-SUB)
5. S-Video Port /S-Video埠/S-Video埠
6. USB Ports/USB埠/USB埠

2 Setup • 開始使用 • 开始使用

1. Slides in battery /電池組安裝到電腦之中 /电池组安装到电脑之中
2. Connect to the AC power source /連接AC電源 /连接AC电源变压器
3. Open the LCD panel to a comfortable viewing angle /掀起螢幕並將螢幕調整至最適合觀看的角度 /掀起屏幕并将屏幕调整至最适合观看的角度
4. Press the power button to turn on the power /按下電源鍵來啟動您的筆記型電腦 /按下电源键来启动您的笔记本电脑

Media Card Status Indicator / 請卡狀態指示燈 / 读卡状态指示灯
This light flickers when the computer is reading a multimedia or SD card.
電腦讀多媒體卡或SD卡時燈號會閃爍。
电脑读取多媒体卡或SD卡时灯号会闪烁。

Caps Lock /大寫鍵 /大写键
This indicator tells you that the keyboard is set to type in all capital letters.
顯示鍵盤設為全大寫字母。
显示键盘设为全部大写字母。

Num Lock /數字鎖定/数字锁定
Lights up when the numeric mode is turned on by pressing [Num Lock]. Press [Num Lock] again to turn off the embedded numeric keyboard.
指示燈亮起表示 [Num Lock] 數字鎖已開啟。您可以再按下 [Num Lock] 一次來解除鎖定。
指示灯亮起表示 [Num Lock] 数字锁已开启。您可以再按下 [Num Lock] 一次来解除锁定。

Optical Drive and Hard Disk Drive (HDD) access/d
光碟機與硬碟存取指示燈/光碟机与硬盘存取指示
Lights up when the computer is reading information from the optical drive.
此指示灯亮起表示您的电脑系统正在从光碟机读取信息。
指示灯亮起表示 [Num Lock] 數字鎖已開啟。您可以再按下 [Num Lock] 一次來解除鎖定。
指示灯亮起表示 [Num Lock] 数字锁已开启。您可以再按下 [Num Lock] 一次来解除锁定。

Power /電源指示燈 /电源指示灯
It glows blue when the computer is on; It flas blue when the computer is in the suspend mode. The light is off when the computer is in the Hibernation mode or shut down.
電源指示灯亮起蓝灯表示您的电脑系统已经启动。如果閃爍藍燈表示筆記型電腦處於待機模式。
如果电源指示灯亮起蓝灯表示您的计算机系统已经启动。如果闪烁蓝灯表示笔记本型计算机位于待机模式。
如果电源指示灯熄灭则表示系统进入 Save-to-Disk 模式或已关闭电源。
如果电源指示灯熄灭则表示系统进入 Save-to-Disk 模式或已关闭电源。

Battery Status Indicator /電池狀態顯示燈 /电池状态显示灯
Battery status indicator tells you whether the battery is charging or is already charged.
If you are charging your battery, light remains on even if your notebook is shut off.
If there's no battery activity, the power adapters are not connected, or the power switch is off, the battery indicator will also be off.
電池状态显示灯显示电池正在充电或已充饱电。如果电池正在充电，电脑关机后指示灯仍会亮着。如果未使用电池、未接上电源变压器，或电源已关，指示灯则会熄灭。
电池状态显示灯显示电池正在充电或已充饱电。如果电池正在充电，计算机关机后指示灯仍会亮着。如果未使用电池、未接上电源变压器，或电源已关，指示灯则会熄灭。

Wireless LAN /無線區域網路存取指示燈 /无线局域网络存取指示灯
This indicator tells you whether your computer is connected to a wireless network or not.
顯示電腦是否已連結至無線區域網路。
显示电脑是否已连接至无线局域网络。

HD70010